

TOK[®]-Armabit SK


Recommendations for use



Installation steps for TOK[®]-Armabit SK asphalt reinforcement:

1. Position the roll in the unrolling direction (centrally over the crack or joint).


2. Roll off around 50 cm of material and carefully peel off the separating film from approx. 30–50 cm of the length of the strip. Ensure that the bitumen layers do not come into contact with one another, as they will stick together and be difficult to separate.

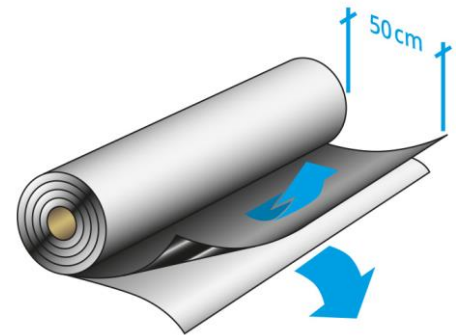

3. Now lift away the peeled separating film and press the exposed bitumen layer onto the surface. Then push the roll back so that the separating film can be removed.



4. Applying slight tension, push the roll in the laying direction while pulling off the separating film. After laying, push the strip down onto the surface using a brush or a small roller.

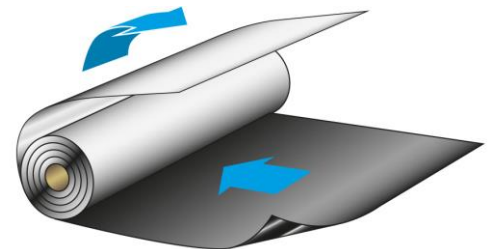

5. Once the end of the section you are laying has been reached, simply cut off the strip using a sharp knife.

DEKOTEC GmbH

Felderstrasse 24 | 51371 Leverkusen | Germany
Phone: +49 214 2602-0 | info@dekotec.com
www.dekotec.com

Our product information, application recommendations and other printed publications provide advice to the best of our knowledge and indicate our level of knowledge at the time of printing. The content is not legally binding. Therefore, no liability is assumed for incorrect and missing advice. The applicator is obliged to check the suitability and possibility of application for the intended purpose. Unless otherwise specified, all of the brand-named are trademarks, at least registered

Only our general terms and conditions of sale, which you will find at www.dekotec.com, apply. This is a translation from the original German product information. In case of any discrepancy or any dispute arising on the interpretation, the German text of the respective German product information, shall be decisive. The legal relationship shall be governed by German law.